


Installation of Flow Sensors: Magnetic

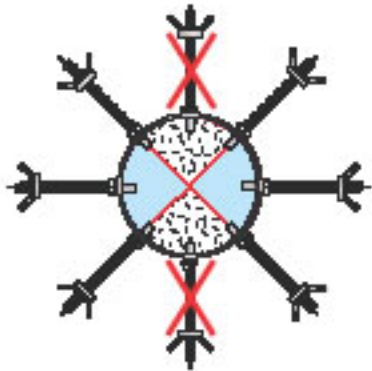

12 o' clock and 6 o' clock
position not recommended

Magnetic Flow Sensors

- All mounting angles are acceptable for these sensors if the basic parameters are met: the pipe must be full with no entrained air.
- On horizontal pipe runs sensor may be mounted in any position around the pipe. If air bubbles or sediments are expected; mount at a slight angle.
- On vertical pipe runs sensor may be mounted in any orientation with UPWARD flow preferred to ensure a full pipe.

